


ORB MK1

USER MANUAL

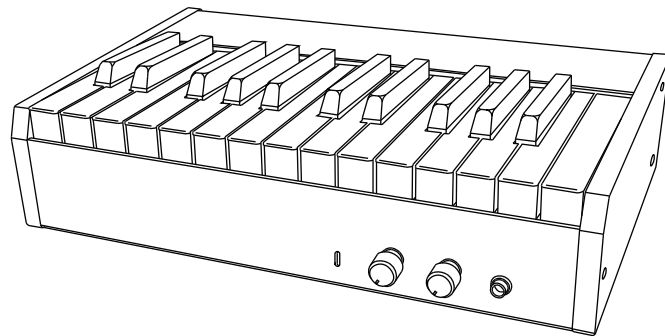

Tentij

Copyright © 2025 Tentij Optical Reed Bass | Tentij Instruments

Tentij

Copyright © 2025 Tentij Optical Reed Bass | Tentij Instruments

Controls

On the front of the piano the output, controls and charging - port is found. A standard USB type C is used for charging the battery.

The tone knob controls how much treble/bass goes to the output for either a deep sub bass sound or a more crunchy bass.


The volume knob controls the amount of output signal.

When turned fully counter clockwise the piano is turned off.

With the standard 6.35mm jack output the signal can be amplified with an amp or straight to a DI/interface.

Three indicating lights can be found between the knobs.

They will light up when: charging, using the tone knob and if the piano is turned on/off.

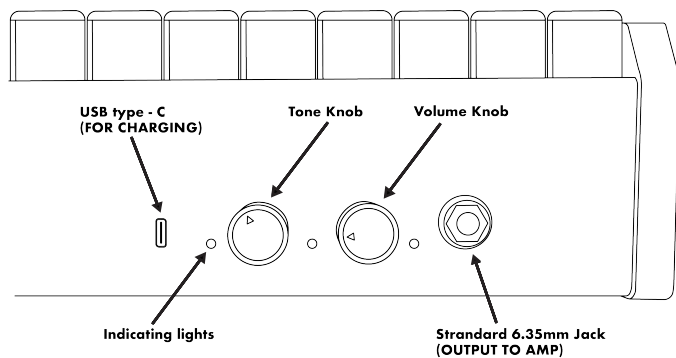

(NOTE: JACK MUST BE PLUGGED IN TO TURN ON)

Tuners

On the bottom of the piano 25 slots can be found with tuning screws.

When a tuning screw is untightened it can slide up and down.

Sliding the tuner up and tightening it back up, the pitch will be higher.

This way the piano can be tuned if needed.

